# UART & SPI

Lecture 6

## **UART & SPI**

used by RP2040

- Direct Memory Access
- Buses
  - Universal Asynchronous Receiver and Transmitter
  - Serial Peripheral Interface
- Analog and Digital Sensors

# **DMA**

Direct Memory Access

# Bibliography

for this section

#### Raspberry Pi Ltd, RP2040 Datasheet

- Chapter 2 *System Description* 
  - Chapter 2.5 *DMA*

#### **DMA**

- offloads the MCU from doing memory to memory operations
- due to MMIO, usually implies transfersfrom and to peripherals
- raises an interrupt when a transfer is done

△ DMA does not know about the data stored in cache.

- for chips that use cache
  - the DMA buffer's memory region has to be set manually to nocache (if MCU knows)
  - or, the cache has to be flushed before and, possibly after, a DMA transfer



# **UART**

Universal Asynchronous Receiver and Transmitter

# Bibliography

for this section

- 1. Raspberry Pi Ltd, RP2040 Datasheet
  - Chapter 4 Peripherals
    - Chapter 4.2 *UART*
- 2. **Paul Denisowski**, *Understanding Serial Protocols*
- 3. Paul Denisowski, *Understanding UART*

## **UART**

#### aka serial port

- connects two devices
- uses two independent wires
  - *TX* transmission wire
  - $\blacksquare$  *RX* reception wire
- cross-connected



#### **Transmission example**



### **UART** Device

properties

the number of bitsbits in the payload,between 5 and 9

parity add or not the parity bit

stop the number of stop bits to add, 1 or 2

number of elements
baud sent per s, most
rate used 9600 or
115200



$$baud_{rate} = rac{f_{clock}}{divider imes (1 + payload_{bits} + parity_{bits} + stop_{bits})}$$

#### **UART** Device

types

- TTL Transistor Transistor Logic connects devices at 0 3.3V or 0 5V, used for short cables and jumper wires
- RS232 used for external connections and longer cables, uses -12V to 12V.
- RS485 industrial, uses differential voltage



## Receiver

RX part of the serial port





- Shift Register to read serially everybit
- Triggers an interrupt
  - when data was received
  - (optional) when FIFO is half full
  - (*optional*) when FIFO is full
- FIFO is optional
  - may have a capacity of 1

### **Transmitter**

TX part of the serial port





- Shift Register to output serially everybit
- Triggers an interrupt
  - when data was sent
  - (*optional*) when FIFO is half empty
  - (optional) when FIFO is empty
- FIFO is optional
  - may have a capacity of 1

# **Transmission Examples**

| Setup            | Payload                              | Parity                                     | Stop     |  |
|------------------|--------------------------------------|--|----------|--|
| 8N1              | 8 bits                               | no   | 1 bit    |  |
| 8P2              | 8 bits                               | yes  | 2 bits   |  |
| 9P1              | 9 bits                               | yes  | 1 bit    |  |
| elecrical signal | b7 \ b6 \ B5 \ b4 \ b3 \ b2  start \ | \stop\//////////////////////////////////// |          |  |
| data data        | start payload                        | \(\text{parity}\)\(\text{stop}\)           | <u> </u> |  |

## **Successive Transmission**

using the 8N1 data format

#### Back to back



#### With delay



## **Facts**

| Transmission | duplex      | data can be sent in both directions at the same time  |
|--------------|-------------|---|
| Clock        | independent | there is no clock sent between the two devices, the <b>receiver</b> has to <b>synchronize its clock with the transmitter</b> to be able to correctly read the received data |
| Wires        | RX/TX       | one receive write, one transmit wire, independent of each other   |
| Devices      | 2           | a receiver and a transmitter  |
| Speed        | 115 KB/s    | usually a maximum baud rate of 115200 is used   |



## Usage

- print debug information
- device console
- RP2040 has two USART devices



## **Embassy API**

for RP2040, synchronous

```
pub struct Config {
  pub baudrate: u32,
  pub data_bits: DataBits,
  pub stop_bits: StopBits,
  pub parity: Parity,
  pub invert_tx: bool,
  pub invert_rx: bool,
  pub invert_rts: bool,
  pub invert_cts: bool,
}
```

```
pub enum DataBits {
  DataBits5,
  DataBits6,
  DataBits7,
  DataBits8,
}
```

```
pub enum StopBits {
   STOP1,
   STOP2,
}
```

```
pub enum Parity {
   ParityNone,
   ParityEven,
   ParityOdd,
}
```

```
use embassy_rp::uart::Config as UartConfig;
let config = UartConfig::default();

// use UARTO, Pins 0 and 1
let mut uart = uart::Uart::new_blocking(p.UARTO, p.PIN_0, p.PIN_1, config);
// write
uart.blocking_write("Hello World!\r\n".as_bytes());

// read 5 bytes
let mut buf = [0; 5];
uart.blocking_read(&mut buf);
```

## **Embassy API**

for RP2040, asynchronous

```
15
      // read 5 bytes
16
      let mut buf = \lceil 0; 5 \rceil;
     uart.read(&mut buf).await;
17
```

# **SPI**

Serial Peripheral Interface

# Bibliography

for this section

- 1. Raspberry Pi Ltd, RP2040 Datasheet
  - Chapter 4 Peripherals
    - Chapter 4.4 *SPI*
- 2. **Paul Denisowski**, *Understanding SPI*

## **SPI**

a.k.a spy

- Used for communication between integrated circuits
- Sensors usually expose an SPI and an I2C interface
- Two device types:
  - main (master) controls the communication (usually MCU)
  - *sub* (slave) receive and transmit data when the *main* requests (usually the sensor)



## Wires

3 + n

- MOSI Main Out Sub In carries data from the main to the subs
- MISO Main In Sub Out carries data from the active sub to the main
- CLK Clock the clock signal generated by the main, subs sample and write data to the bus only on the clock edge
- *CS*\* **C**hip **S**elect not actually part of SPI, one wire / sub, activates **one sub at a time** 
  - inactive subs have to disconnect from the MOSI and MISO lines







## Transmission Example

- 1. main activates the sub device
  - sets the CS signal to LOW
- 2. at the same time
  - main puts the first bit on the MOSI line
  - sub puts the first bit on the MISO line
- 3. **main** starts the clock
- 4. at the *rising edge* 
  - main reads the data from the MISO line
  - **sub** reads the data from the MOSI line
- 5. on the *falling edge* 
  - main puts the next bit on the MOSI line
  - **sub** puts the next bit on the MISO line
- 6. repeat 4 and 5 until **main** decides to stop the clock

#### SPI Signals

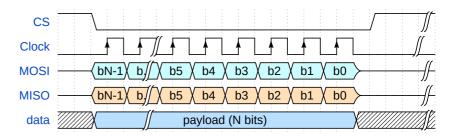

#### **SPI Network**

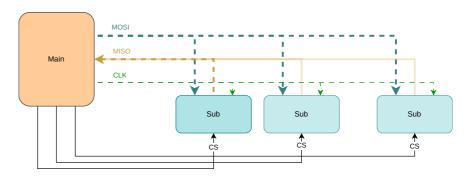

## **SPI** Modes

when data is read and written

| Mode | CPOL | СРНА |
|------|------|------|
| 0    | 0    | 0    |
| 1    | 0    | 1    |
| 2    | 1    | 0    |
| 3    | 1    | 1    |



defines when the data bit is read

CPOL Clock polarity 0: rising edge

1: falling edge

Clock phase

CPHA

defines when the data is written to the line

0: when CS activates or clock edge

1: on clock edge (depends on CPOL)

## Transmission Example

one main, two subs



- 1. main activates the CS pin of sub 1
- 2. **main** writes the first bit on MOSI, **sub 1** writes the first bit on MISO
- 3. **main** starts the clock
- 4. main and sub 1 send the rest of the bits
- 5. **main** stops the clock
- 6. main deactivates the CS pin of sub 1

- 7. **main** activates the CS pin of **sub 2**
- 8. **main** writes the first bit on MOSI, **sub 2** writes the first bit on MISO
- 9. **main** starts the clock
- 10. main and sub 2 send the rest of the bits
- 11. **main** stops the clock
- 12. **main** deactivates the CS pin of **sub 2**

## Daisy Chaining

using several SPI devices together

- 1. main activates all the subs
- 2. on the clock edge
  - main sends data to sub 1
  - **sub** 1[1] sends data to **sub** 2
  - **.**..
  - sub n-1 sends data to sub n
  - **sub n** sends data to **main**
- usually subs send the previous data bit received from main to the next sub ←

#### activate all the **sub** devices





## **Facts**

| Transmission | duplex                    | data must be sent in both directions at the same time  |  |  |  |  |  |
|--------------|---------------------------|--|--|--|--|--|--|
| Clock        | synchronized              | the <b>main</b> and <b>sub</b> use the same clock, there is no need for clock synchronization      |  |  |  |  |  |
| Wires        | MISO / MOSI / CLK /<br>CS | different read and write wires, a clock wire and an <i>optional</i> chip select wire for every sub |  |  |  |  |  |
| Devices      | 1 main<br>several subs    | a receiver and a transmitter   |  |  |  |  |  |
| Speed        | no limit                  | does not have any limit, it is limited by the <b>main</b> clock and the electronics wirings        |  |  |  |  |  |

## Usage

- EEPROMs / Flash (usually in *QSPI* mode)
  - Raspberry Pi Pico has its 2MB Flash connected using *QSPI*
- sensors
- small displays
- RP2040 has two SPI devices

## **Embassy API**

for RP2040, synchronous

```
pub struct Config {
  pub frequency: u32,
  pub phase: Phase,
  pub polarity: Polarity,
}
```

```
pub enum Phase {
   CaptureOnFirstTransition,
   CaptureOnSecondTransition,
}
```

```
pub enum Polarity {
   IdleLow,
   IdleHigh,
}
```

```
config.frequency = 2 000 000;
13
     cs.set low();
     let mut buf = [0x90, 0x00, 0x00, 0xd0, 0x00, 0x00];
14
15
     spi.blocking transfer in place(&mut buf);
     cs.set high();
```

## **Embassy API**

for RP2040, asynchronous

```
config.frequency = 2 000 000;
13
     cs.set_low();
14
     let tx_buf = [1_u8, 2, 3, 4, 5, 6];
     let mut rx_buf = [0_u8; 6];
15
16
     spi.transfer(&mut rx buf, &tx buf).await;
     cs.set high();
17
```

# Sensors

Analog and Digital Sensors

# Bibliography

for this section

#### **BOSCH**, BMP280 Digital Pressure Sensor

- Chapter 3 Functional Description
- Chapter 4 Global memory map and register description
- Chapter 5 *Digital Interfaces* 
  - Subchapter 5.3 *SPI Interface*

### Sensors

analog and digital

#### Analog

- only the transducer (the analog sensor)
- outputs (usually) voltage
- requires:
  - an ADC to be read
  - cleaning up the noise



#### Digital

- consists of:
  - a transducer (the analog sensor)
  - an ADC
  - an MCU for cleaning up the noise
- outputs data using a digital bus



# BMP280 Digital Pressure Sensor

schematics



Datasheet

## BMP280 Digital Pressure Sensor

registers map

| Register Name  | Address  | bit7             | bit6                              | bit5 | bit4 | bit3        | bit2 | bit1 | bit0   | Reset<br>state |
|----------------|----------|------------------|-----------------------------------|------|------|-------------|------|------|--------|----------------|
| temp_xlsb      | 0xFC     | temp_xlsb<7:4>   |                                   |      | 0    | 0           | 0    | 0    | 0x00   |                |
| temp_lsb       | 0xFB     |                  | temp_lsb<7:0>                     |      |      |             |      | 0x00 |        |                |
| temp_msb       | 0xFA     |                  | temp_msb<7:0>                     |      |      |             |      | 0x80 |        |                |
| press_xlsb     | 0xF9     |                  | press_xlsb<7:4>                   |      |      | 0           | 0    | 0    | 0      | 0x00           |
| press_lsb      | 0xF8     |                  | press_lsb<7:0>                    |      |      |             |      | 0x00 |        |                |
| press_msb      | 0xF7     |                  | press_msb<7:0>                    |      |      |             |      | 0x80 |        |                |
| config         | 0xF5     |                  | t_sb[2:0] filter[2:0] spi3w_en[0] |      |      |             | 0x00 |      |        |                |
| ctrl_meas      | 0xF4     |                  | osrs_t[2:0]                       |      |      | osrs_p[2:0] |      | mod  | e[1:0] | 0x00           |
| status         | 0xF3     |                  | measuring[0] im_update[0]         |      |      |             |      | 0x00 |        |                |
| reset          | 0xE0     | reset[7:0]       |                                   |      |      |             | 0x00 |      |        |                |
| id             | 0xD0     | chip_id[7:0]     |                                   |      |      |             | 0x58 |      |        |                |
| calib25calib00 | 0xA10x88 | calibration data |                                   |      |      | individual  |      |      |        |                |

Registers:

Type:

Calibration Control Data Reserved **Status** Revision Reset data registers registers registers registers do not read only read / write read only read only read only write only

Datasheet

## Reading from a digital sensor

using synchronous/asynchronous SPI to read the press\_lsb register of BMP280



```
const REG_ADDR: u8 = 0xf8;

// enable the sensor
cs.set_low();

// buffer[2]: the address and "empty" value
let mut buf = [(1 << 7) | reg, 0x00];
spi.blocking_transfer_in_place(&mut buf);

// disable the sensor
cs.set_high();

// use the value
let pressure_lsb = buf[1];</pre>
```

```
const REG_ADDR: u8 = 0xf8;

// enable the sensor
cs.set_low();

// two buffers[2], writing and reading
let tx_buf = [(1 << 7) | REG_ADDR, 0x00];
let mut rx_buf = [0u8; 2];
spi.transfer(&mut rx_buf, &tx_buf).await;

// disable the sensor
cs.set_high();</pre>
```

## Writing to a digital sensor

using synchronous/asynchronous SPI to set up the ctrl\_meas register of the BMP280 sensor



```
const REG_ADDR: u8 = 0xf4;

// see subchapters 3.3.2, 3.3.1 and 3.6

let value = 0b100_010_11;

// enable the sensor
cs.set_low();

// buffer[2]: the address and "empty" value
let mut buf = [!(1 << 7) & reg, value];
spi.blocking_transfer_in_place(&mut buf);

// disable the sensor
cs.set_high();</pre>
```

```
const REG_ADDR: u8 = 0xf4;

// see subchapters 3.3.2, 3.3.1 and 3.6

let value = 0b100_010_11;

// enable the sensor
cs.set_low();

// two buffers[2], writing and reading (ignored)

let tx_buf = [!(1 << 7) & REG_ADDR, value];

let mut rx_buf = [0u8; 2];
spi.transfer(&mut rx_buf, &tx_buf).await;
</pre>
```

## Conclusion

we talked about

- Direct Memory Access
- Buses
  - Universal Asynchronous Receiver and Transmitter
  - Serial Peripheral Interface
- Analog and Digital Sensors